

Cutterpede

Rotary Paper Trimmer

TO CUT: Raise **Cutting Bar** and place paper along top or bottom **Paper Stop**. Lower **Cutting Bar** allowing **Magnetic Lock** to connect and hold paper. Hold paper steady. Push **Rotary Blade** down. Slide to cut paper. **Rotary Blade** will cut along left edge of **Cutting Arm**.


TO CHANGE ROTARY BLADE: Pull **Lock** to release. Slide **Rotary Blade** off **Cutting Bar**, slide on new **Rotary Blade** and push **Lock** in place.

TO CHANGE CUTTING MAT: Lift **Cutting Bar**. Pull out **Cutting Mat**, flip to another surface, and slide back in to place. Replace after all four cutting areas are used.

TIPS FOR SUCCESS: For added safety, **Rotary Blade** will not cut paper unless pushed down. Metal knob on **Rotary Blade** should always be tightly screwed so blade does not wobble.

Elbow sets position for quick 6" cuts. 15" Extendable ruler.

Rotary Blade is visible while cutting for improved accuracy. For safety, blade does not extend past **Cutting Arm** until pushed down.

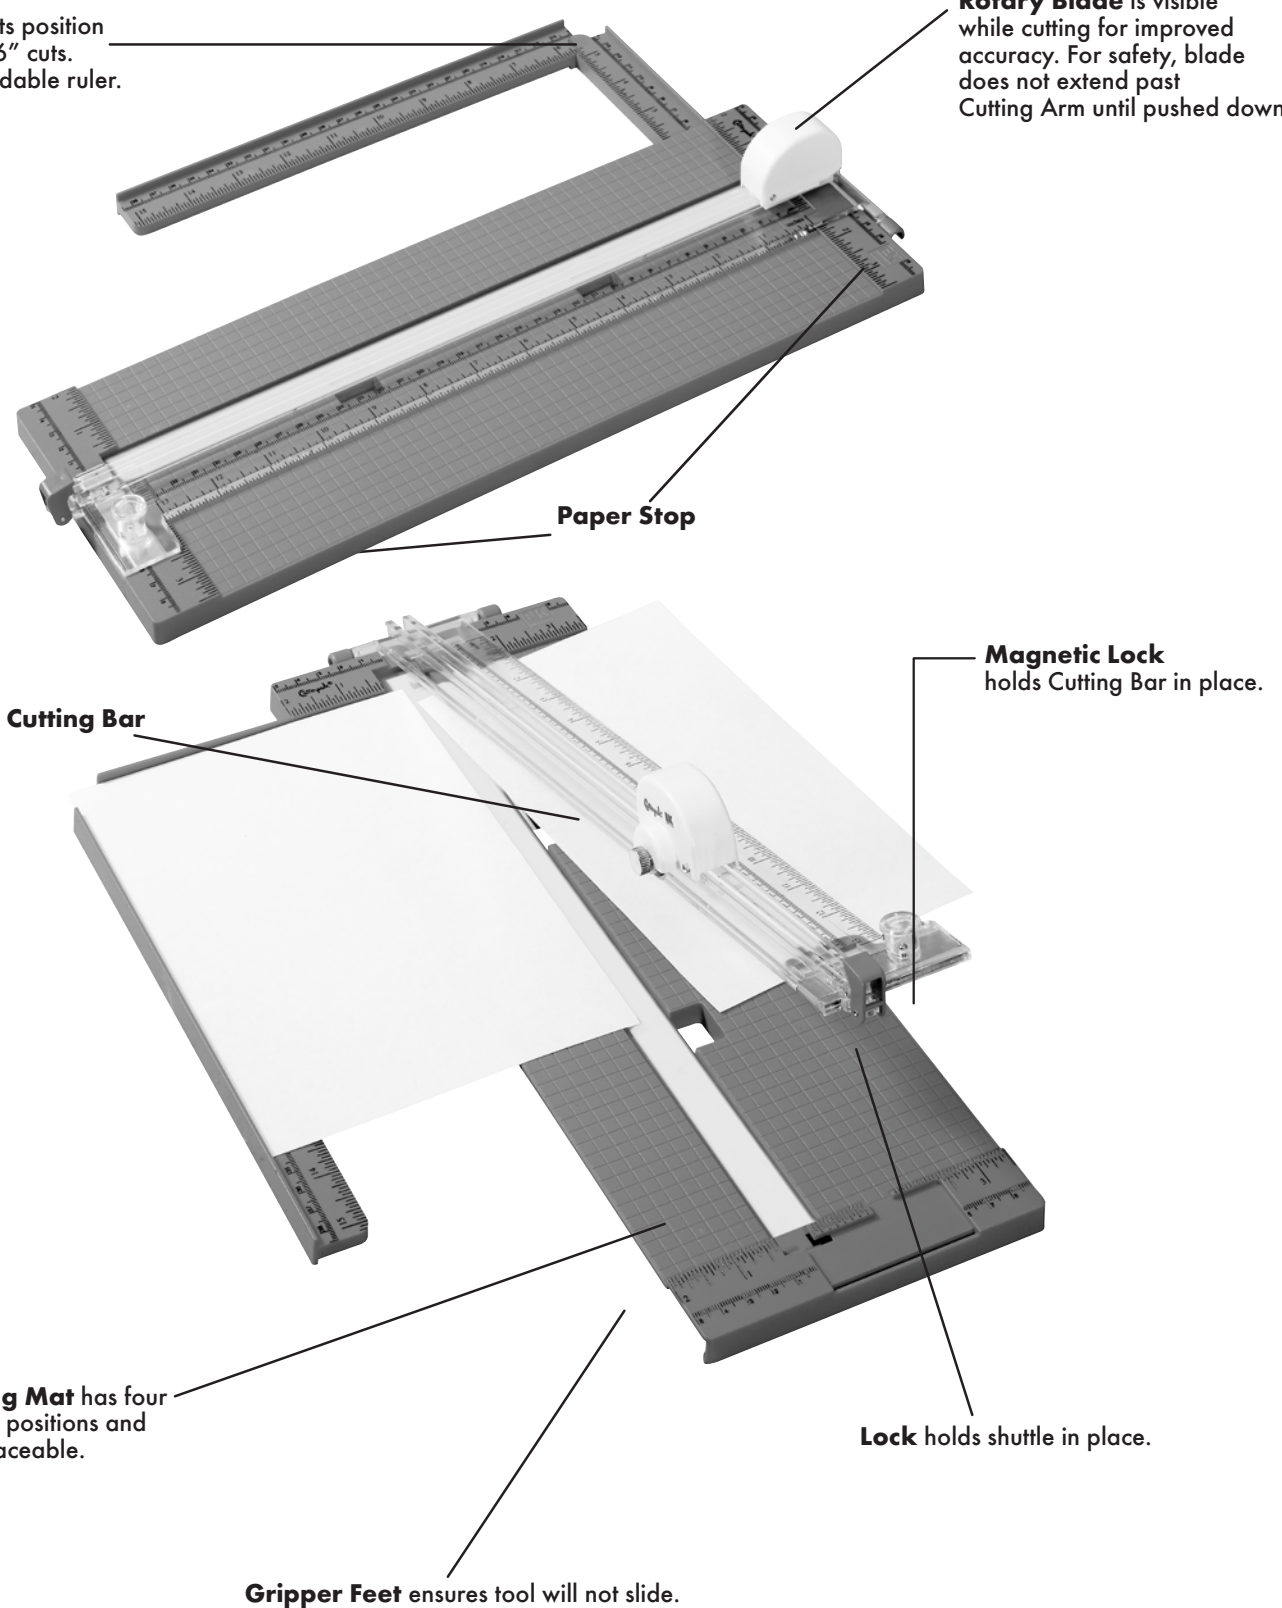

Paper Stop

Cutting Bar

Magnetic Lock holds Cutting Bar in place.

Cutting Mat has four cutting positions and is replaceable.

Lock holds shuttle in place.

Gripper Feet ensures tool will not slide.